


## MEDIAR 408 & 608 - Reset Wash icon 清除掃把圖案

### MEDIAR 408 & 608 Display 顯示屏

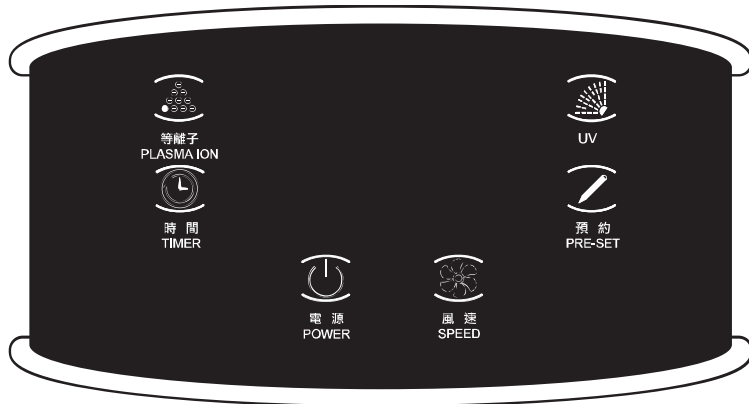


\* Standby mode: After connect power, do not turn on the MEDAIR air purifier

As the screen of the purifier adopts the power saving mode, if there is no operation for several minutes, the screen will turn off all the lights. At this time, the user will see a dark screen. Press any key to leave the screen out of the power saving mode.

\* 待機狀態: 正確連接電源但尚未開啓 MEDAIR 空氣淨化器

由於淨化器的屏幕採用省電模式，如數分鐘沒有任何操作，屏幕會關上所有燈光，此時用戶會看見漆黑一片的屏幕，請按任何一個鍵即可以令屏幕離開省電模式

In standby mode (the display shows time, fan icon [No rotation] and 0000) -> Press UV one time

(The icon is ) -> Display will show accumulate operating time and wash icon -> Press and hold UV until the wash icon disappears

在待機狀態 (屏幕顯示時間、風扇圖案 [沒有轉動] 及 0000) -> 按 1 次 UV 鍵 (圖案係 ) -> 顯示屏會出現累計的使用時間及掃把圖案 -> 長按 UV 鍵直至掃把圖案消失

如進入了連接 wifi 模式 (wifi 圖案閃爍)，這模式會引致在待機狀態下，等離子及 UV 鍵的輔助功能暫停，請中止電源數分鐘，然後再重新接上電源，淨化器便會離開 wifi 模式

[進入連接 wifi 模式: 在待機狀態下，同時按等離子+UV 鍵 或 長按 UV 鍵]