

# MEDAIR air treatment unit

## Open Machine Cover procedure

### 打開機器的門板指引

1



拇指 A 向箭咀方向推, 拇指 B 向箭咀方向拉. According to the arrows direction, thumb A push and thumb B pull.

2




打開機器門板上方的兩側  
Open the top of both sides of the cover

3



扶著面板的下方, 慢慢取出面板  
Leaning on the bottom of the panel  
and slowly take out the panel

4

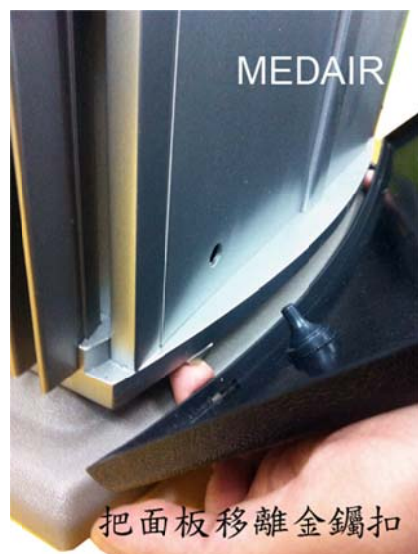

把面板移離金屬扣  
The panel away from the metal buckle

5



取出橡皮塞  
Remove the rubber stopper

6



取出主過濾倉  
Take out the chamber



安裝門板，先裝上安裝橡皮塞  
Install the rubber stopper



找出門板金屬扣的位置，把門板套上  
Find out the metal buckle and install  
the panel.



把門板套上金屬扣上  
After installing panel, you can see the  
metal buckles.



把門板上方左右兩側金屬扣對準插入機  
身扣孔內，未完全插入孔前切勿過份用  
力強行推入  
The two sides of the door above the  
metal clasp buckle holes align insert  
body, is not fully inserted into the hole  
before Do not push too hard to force



門板扣實後，會聽到啪一聲，代表完全  
扣上。  
After success installed, you hear  
sound "Pak", representatives fully  
engaged.

**Remarks:**

Make sure the machine cover has been well locked, the Safety Door Lock Switch has function normally, otherwise the machine can not be power on.

請確保門板已完全鎖上，門板電子安全鎖回復正常運作，否則此機之安全設計使之不能正常著機運作

[www.medair.asia](http://www.medair.asia)

